

WARNING 警告



Certified shooting safety goggles
合格的發射防護眼鏡。

Wear protective eye wear & face mask when using air soft airguns.
當使用汽彈槍時，請戴上防彈眼鏡和面具。




Read and understand the operating and safety manual before using your air soft airguns.

在使用汽彈槍前，請先閱讀和理解操作安全手冊。



Do not look directly into the gun barrel to avoid accidental discharge of BB.

不要直接地看槍管，避免BB彈意外發射。

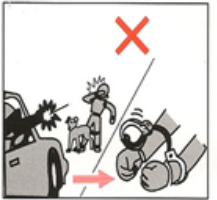

You may be punished if you damage public or personal properties or injure a person or animal even if you are shooting for a practical joke. Always observe manners and enjoy healthy sport shooting.

如果你損害公共的或私人的財產，或者傷害人或動物，即使你是在進行射擊實踐遊戲，你也會受到懲罰。請始終遵守規則，享受有益健康的運動射擊。



Never aim or shoot a person or animal as the target. Always attach the protective plug to the muzzle, except when you are ready to shoot a target.

不可把人或動物當作目標瞄準或射擊。始終系上槍口的防護塞，除非你準備去射擊一個明確的目標。



This air gun is manufactured under consideration of appropriate performance and operability. Disassembling or modifying the gun may generate danger or adversely affect the performance. So avoid disassembling or modifying the air gun.
該槍是根據適當的性能和操作性而製造的。拆除或改裝槍可能產生危險或者違反操作。因此要避免拆除或改裝該槍。

THE NAME OF THE PARTS 各部件名稱




WWW.DOUBLEBELLAIRSOFT.COM



AK Series Manual


Electric Airsoft Rifle

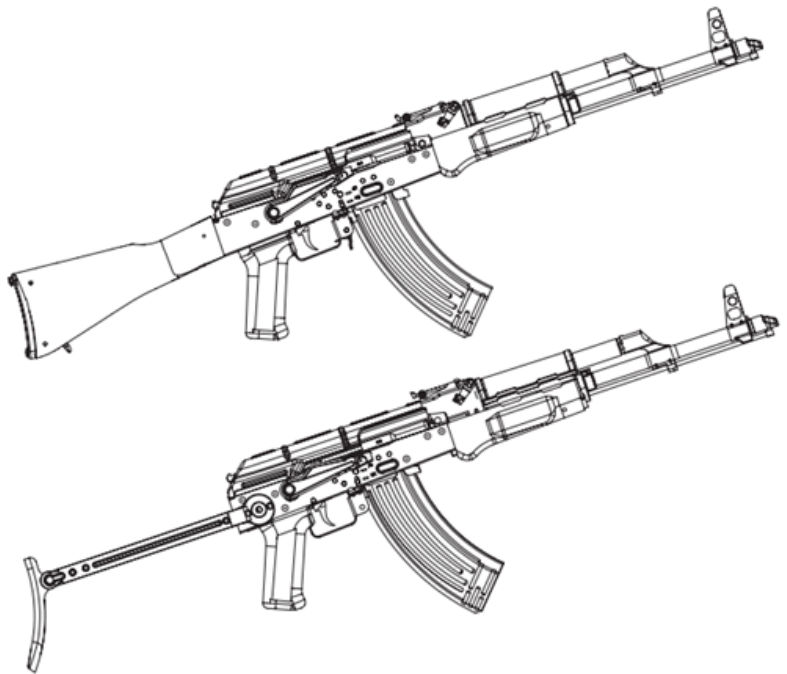

SETTING THE MAGAZINE 裝彈匣



REAR SIGHT ADJUSTMENTS 后瞄准器的調節

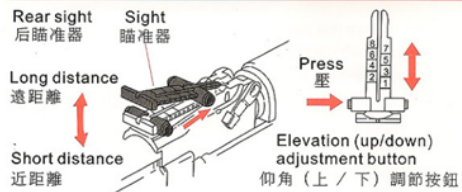


SLING INSTALLATION 安裝背帶

- Buckle one end of the sling button on the sling ring of the rear sight, and buckle the other end on the sling ring of the gunstock.
- 將背帶扣的一端，扣在后瞄准器的背帶環上，另一端扣在槍托背帶環上。



IF THE BULLET IS BLOCKED 如果子彈被卡住

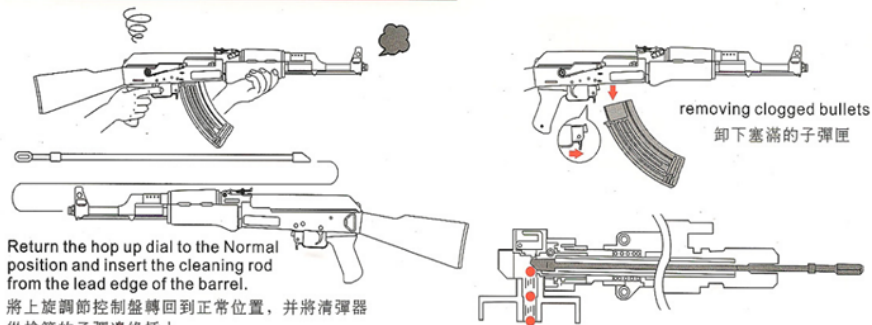

Return the hop up dial to the Normal position and insert the cleaning rod from the lead edge of the barrel.
將上旋調節控制盤轉回到正常位置，並將清彈器從槍管的子彈邊緣插入。

Caution: since clogging bullets may jump out at a high speed. Always wear safety goggles and confirm safety.

注意：塞滿的子彈可能會突然快速地蹦出來，因此一定要戴護目鏡以確保安全。

be careful so that the angled part of the cleaning rod faces down, and remove clogged bullets.
注意清彈器的尖端部分必須朝下，再取出塞滿的子彈。

爆炸图 EXPLOSION

AKM-01 Flash hider
AKM-02 Front sight set
AKM-03 Gas chamber
AKM-04 Upper handguard
AKM-05 Gas tube
AKM-06 Upper handguard fasten base
AKM-07 Upper handguard spring
AKM-08 Outer barrel
AKM-09 Cleaning Rod
AKM-10 Lower handguard fasten base
AKM-11 Lower handguard
AKM-12 Lower handguard spring
AKM-13 Rear sight set
AKM-14 Rear sight base
AKM-15 Bolt carrier set
AKM-16 Upper receiver
AKM-17 Recoil rod set
AKM-18 Inner barrel
AKM-19 Inner barrel spring
AKM-20 Hop-up packing
AKM-21 Hop-up spring
AKM-22 Gear box set
AKM-23 Motor
AKM-24 Motor holder set
AKM-25 Magazine release lever
AKM-26 Selector lever set
AKM-27 AKM lower receiver
AKM-28 Grip
AKM-29 AKM fixed stock
AKM-30 Magazine

