

\*The Japan version has less than 0.98 joules of power



## **LEE-ENFIELD RIFLE Manual**

SPRING HAND PULL VERSION



WWW.DOUBLEBELLAIRSOFT.COM

## **OPERATING**

1.Raise the bolt handle and pull it all the way back.

2.Press magazine catch and pull the magazine out.



3. Load the 6mm bb bullet into the shel

4. Load the bullet shell into the magazine and insert the magazine.



4-1. Or load the bullet shell into the shell ejecting port.



5. Slide the bolt forward and push the bolt handle down.





6.Safety



To engage the safety, pull the safety fully to the rear. when you are ready to fire, push the safety forward.

7.Fire



## **GENERAL DISMANTLE FOR MAINTENANCE**

1.Press bolt lock button and pull the bolt all the way back.



2.Raise the block and pull the bolt out.

