




MOSIN-NAGANT SNIPER RIFLE MANUAL

SHELL EJECTING VERSION

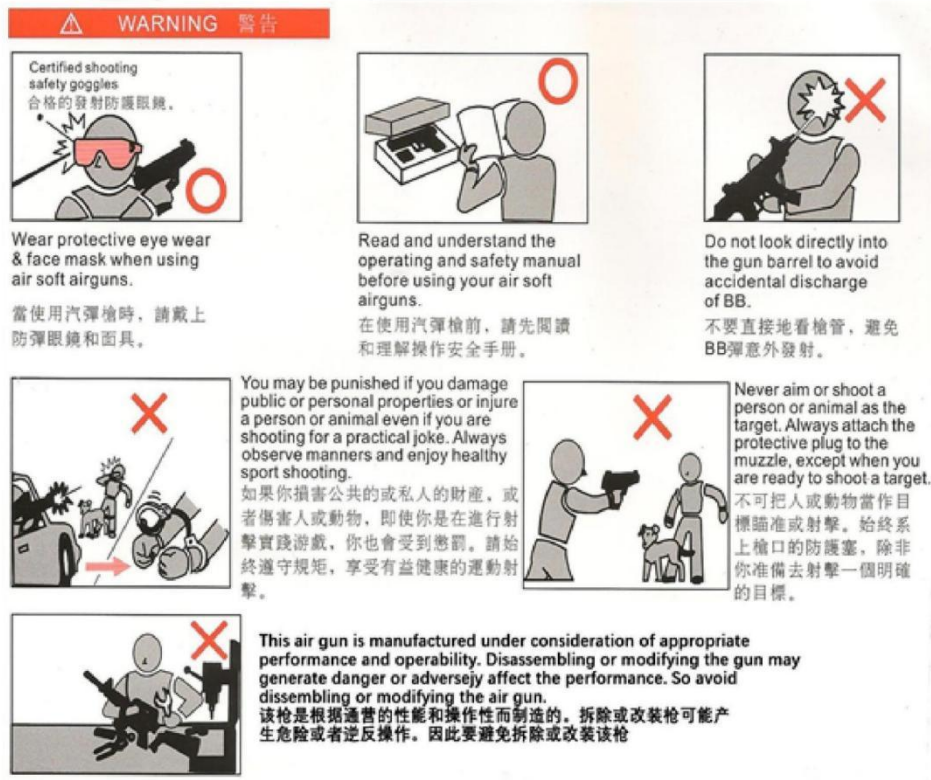

WWW.DOUBLEBELLAIRSOFT.COM

OPERATING

1. Raise the bolt handle and pull it all the way back.



2. Load the bb bullet into the shell.



3. load the bullet shell into the shell ejecting port.



4. Slide the bolt forward and push the bolt handle down.



4. Safety




To engage the safety, pull the safety to the left.



When you are ready to fire, pull the safety to the middle.

GENERAL DISMANTLE FOR MAINTENANCE

1. Pull the bolt lock to the left and pull the bolt all the way back.

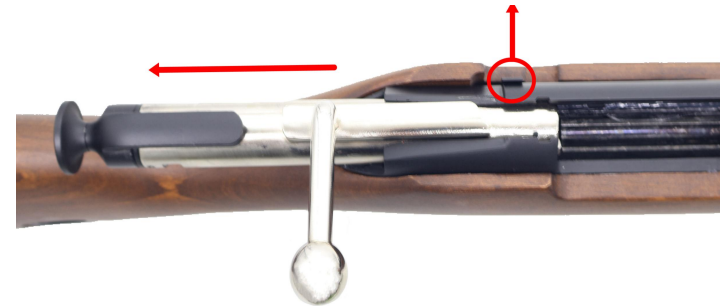

2. Press down the spring release lever to allow the bolt pass by and pull the bolt lock to the left and push the bolt all the way forward.



PU SCOP INSTALLATION INSTRUCTION



1. Attach the scop base plate to the body and tighten with screws. Install the scop mount and tighten with a screw.